



Static IP Setup Guide

Static IP Setup Guide

Introduction

Note: Information to map your drive can be found in the associated drive mapping section of the most recent User Manual.

In these examples 192.168.1.225 is the placeholder for the Cognivue Device's IP address and cogaccess is the placeholder for the SMB password which can be set on the device by an administrator user

There are two shares available on the device: Reports and Csv. The Reports share is shown for this guide.

Login as an administrator user and open the **Network** Screen(see the latest user manual for how to do this)

1. Click the **Advanced Configuration** button

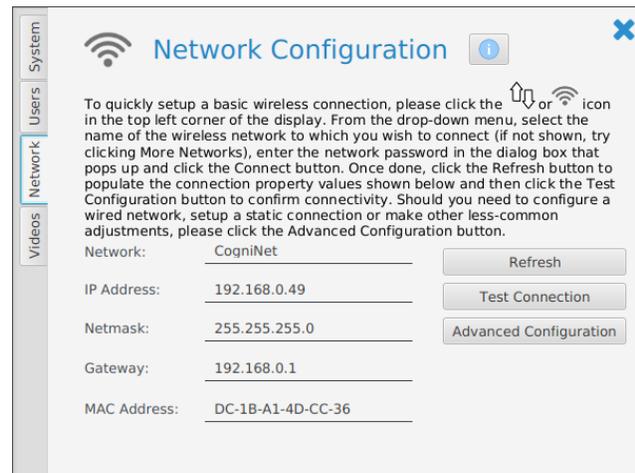


Figure 1 Network Configuration Screen

2. Click the connection name for your SSID
3. Click the Gear Icon

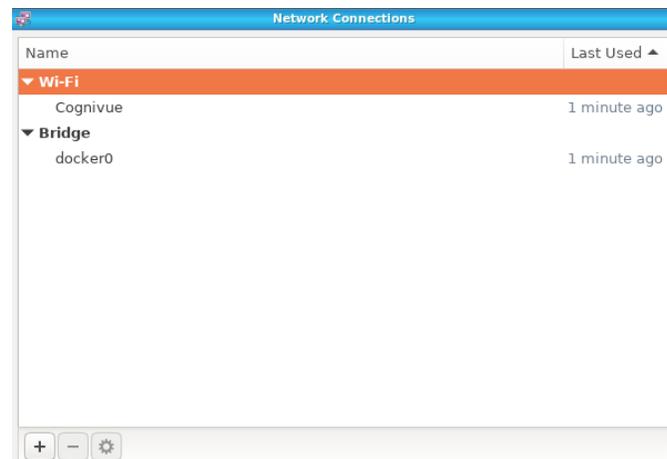


Figure 2 Network Connection Screen

Static IP Setup Guide

1. On the pop-up window that appears, click on the **IPv4 Settings** tab.
2. Click the **Method** drop-down-menu button and select **Manual**.

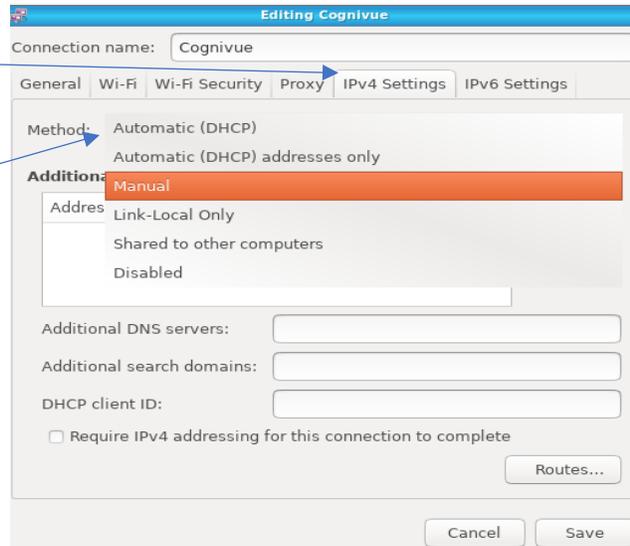


Figure 3 Edit Connection Screen

3. Click the **Add** button
4. In the **Address** field, enter your static or reserved IP (obtained from your network team).
5. In the **Netmask** field, enter the Subnet mask (obtained from your network team).
6. In the **Gateway** field, enter the default gateway address (obtained from your network team).
7. Click the **Save** button.

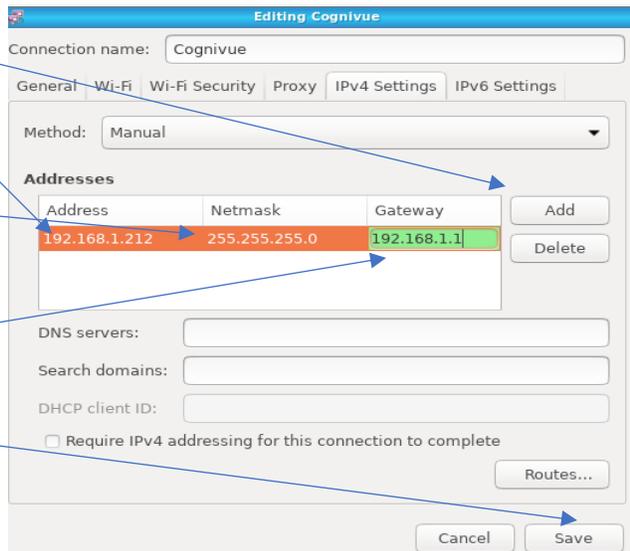


Figure 4 Edit Connection Screen (Add)

8. Close the **Network Connections Screen** by clicking the title bar icon
9. Click **Close** menu item

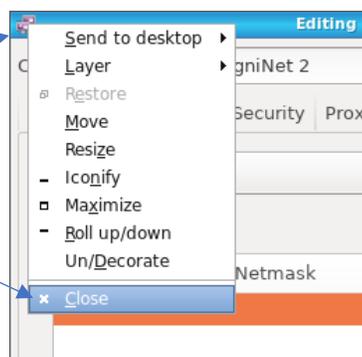


Figure 5 Close Menu